

Microwave oven



レンジ

AUTO

Automatic warming

レンジ

M

Manual Warm Mode

レンジ



Drink Mode

レンジ



frozen food mode

レンジ



Decompress mode


OVEN

Oven Mode

Washing Machine


When adding liquid detergent, please pull out the blue scraper in the order of ① and ② and use it upright.

Detergent and softener added

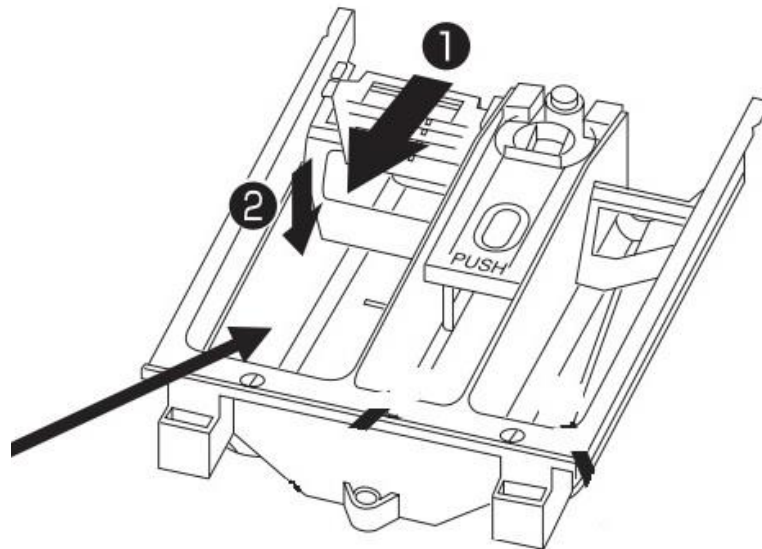


Dehydration

Rate option display

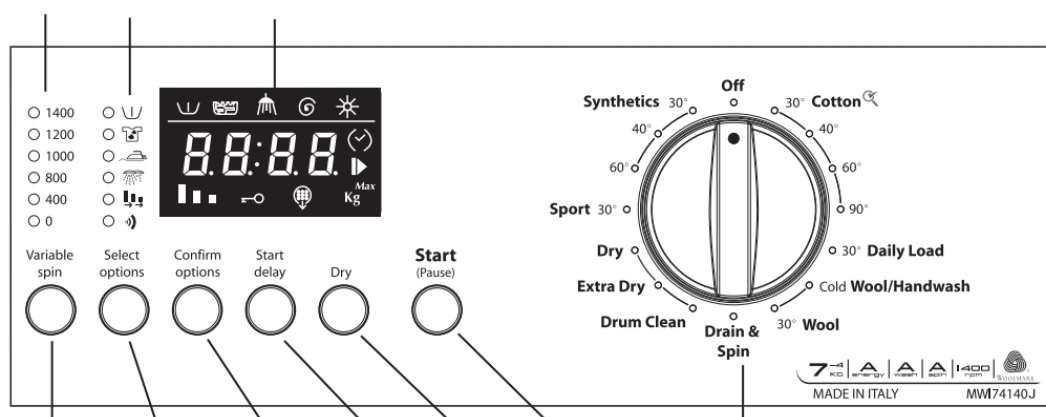


Select the **Daily load** gear for regular clothing, and the spin speed for dehydration is 800, which takes about 1 hour. After washing over, turn the **DRY** gear and press the DRY button to select the drying time.

Maximum washing capacity 7kg, maximum drying capacity 4kg.

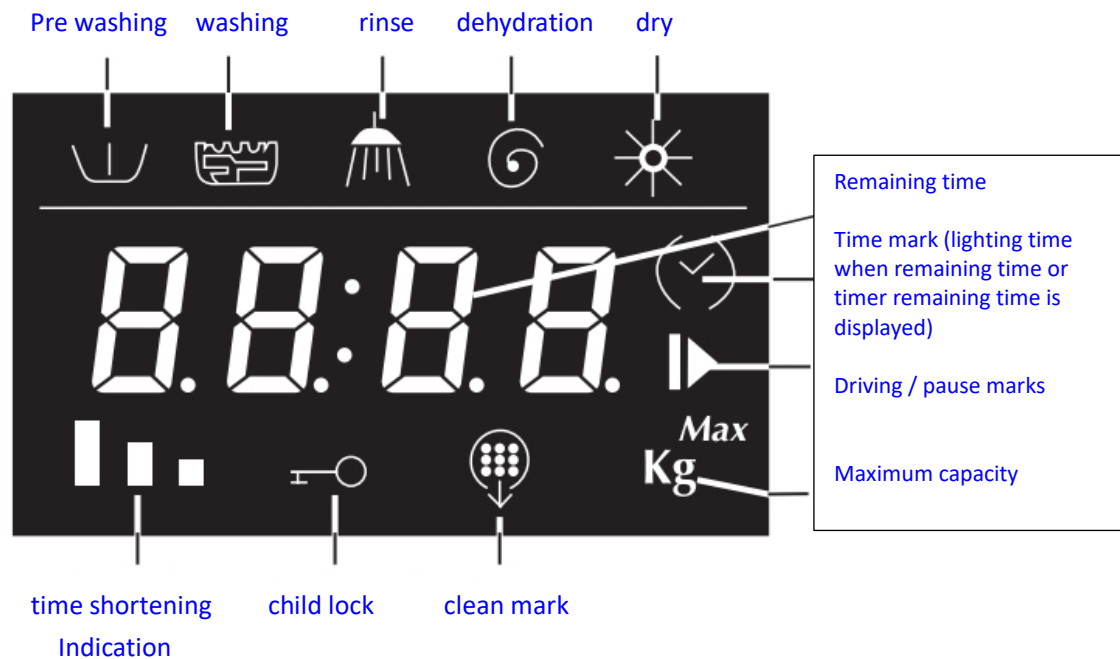


Air-condition

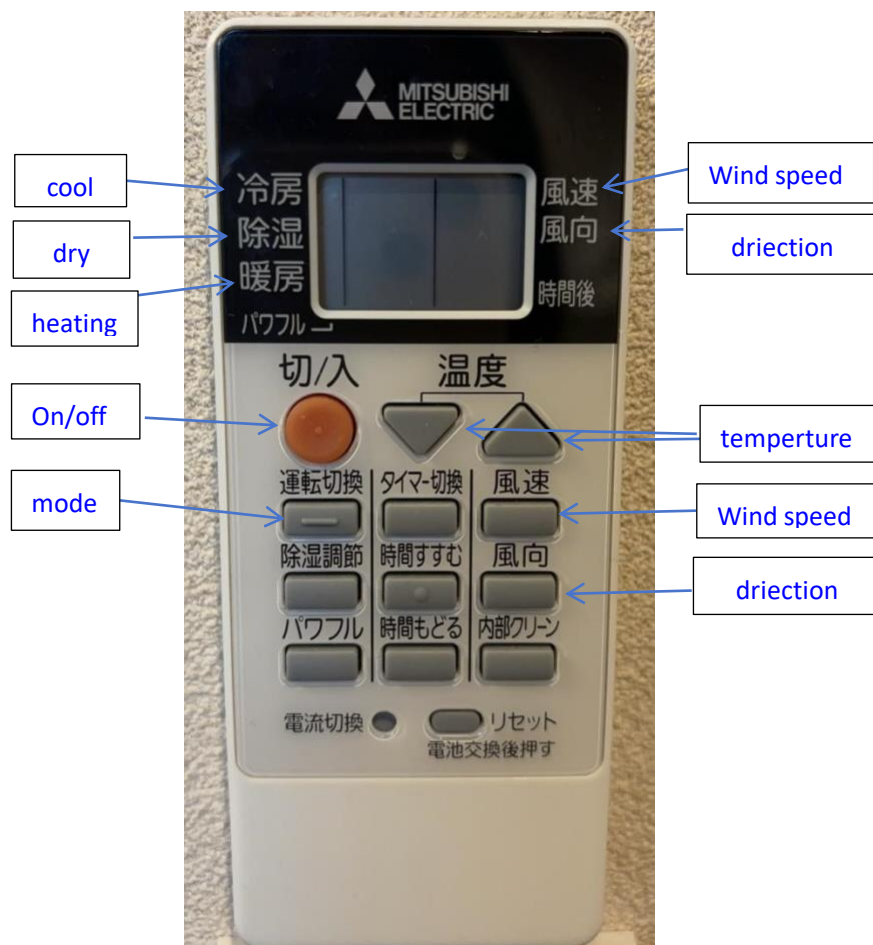

Underfloor heating


Press the power button first and adjust the temperature

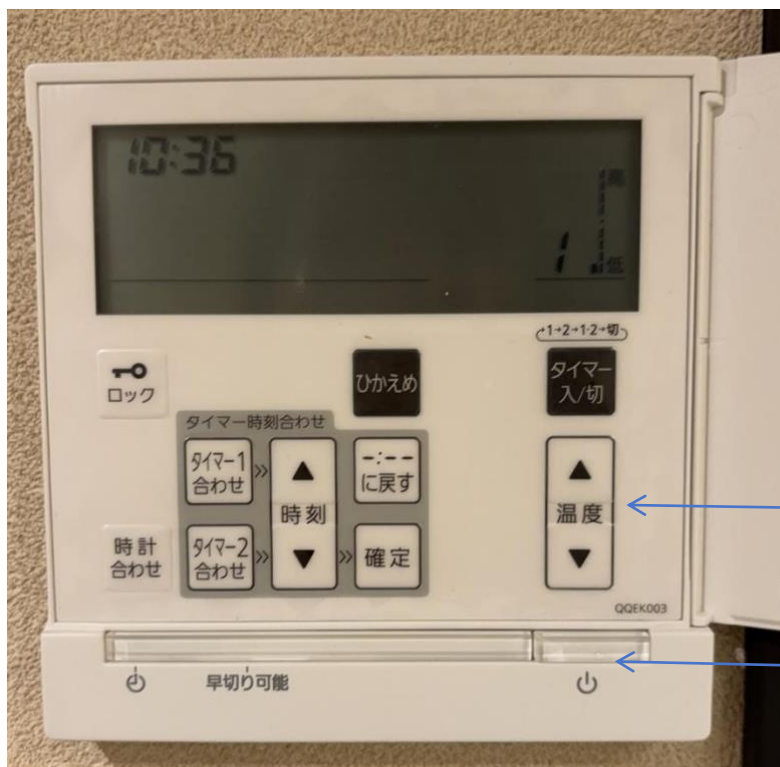


temperature

power

Toilet


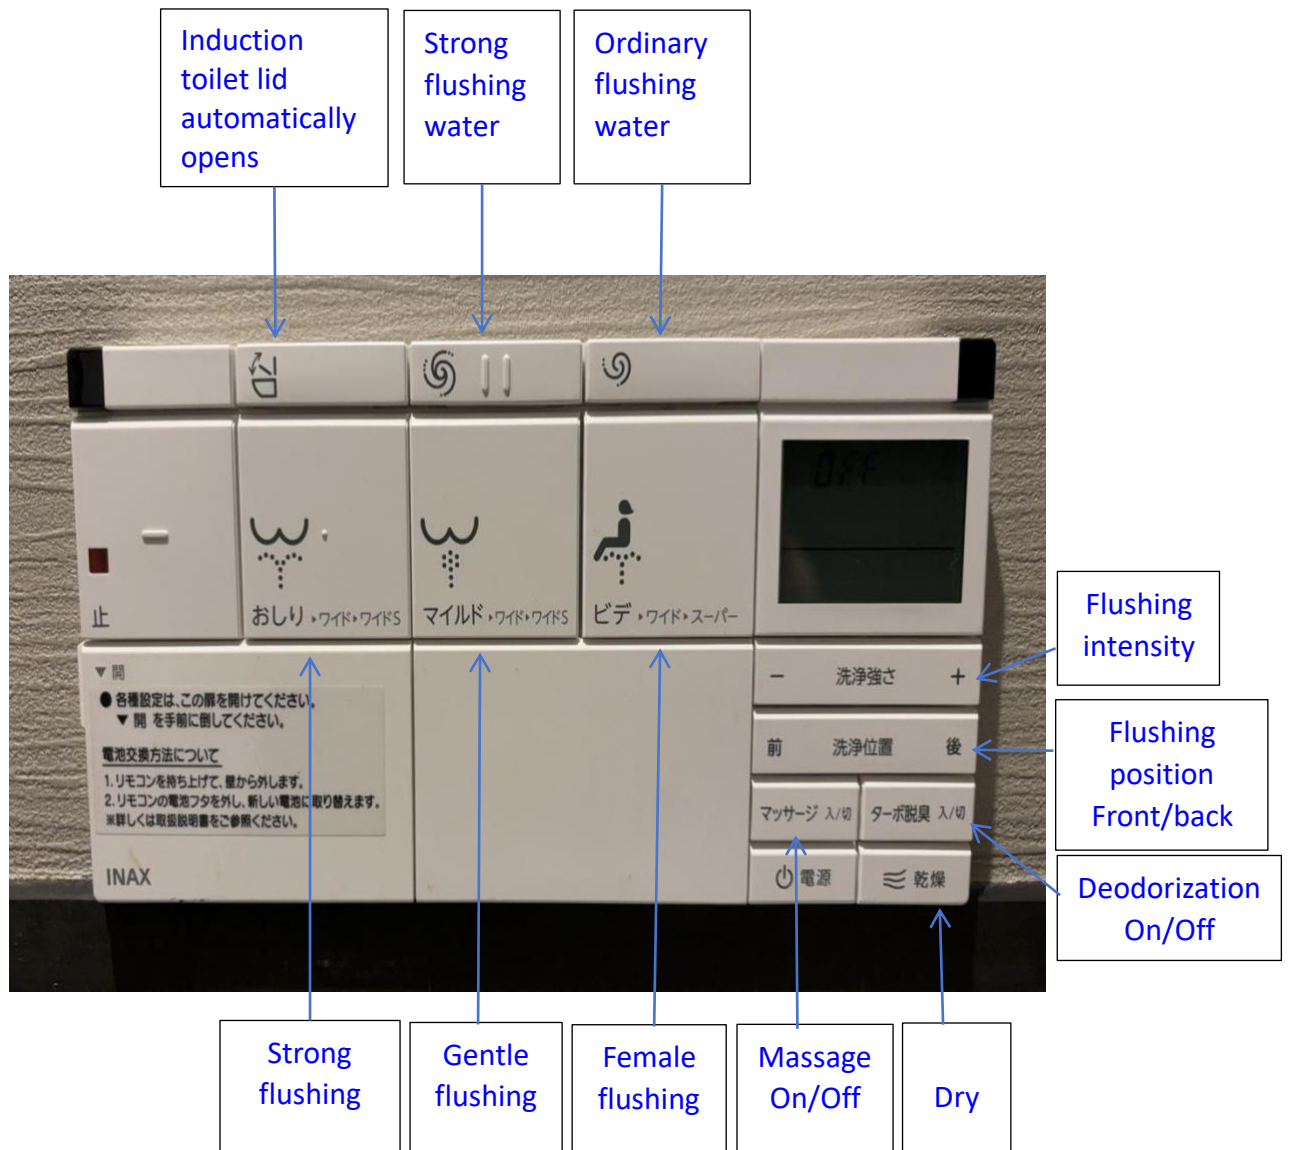


TV remote control

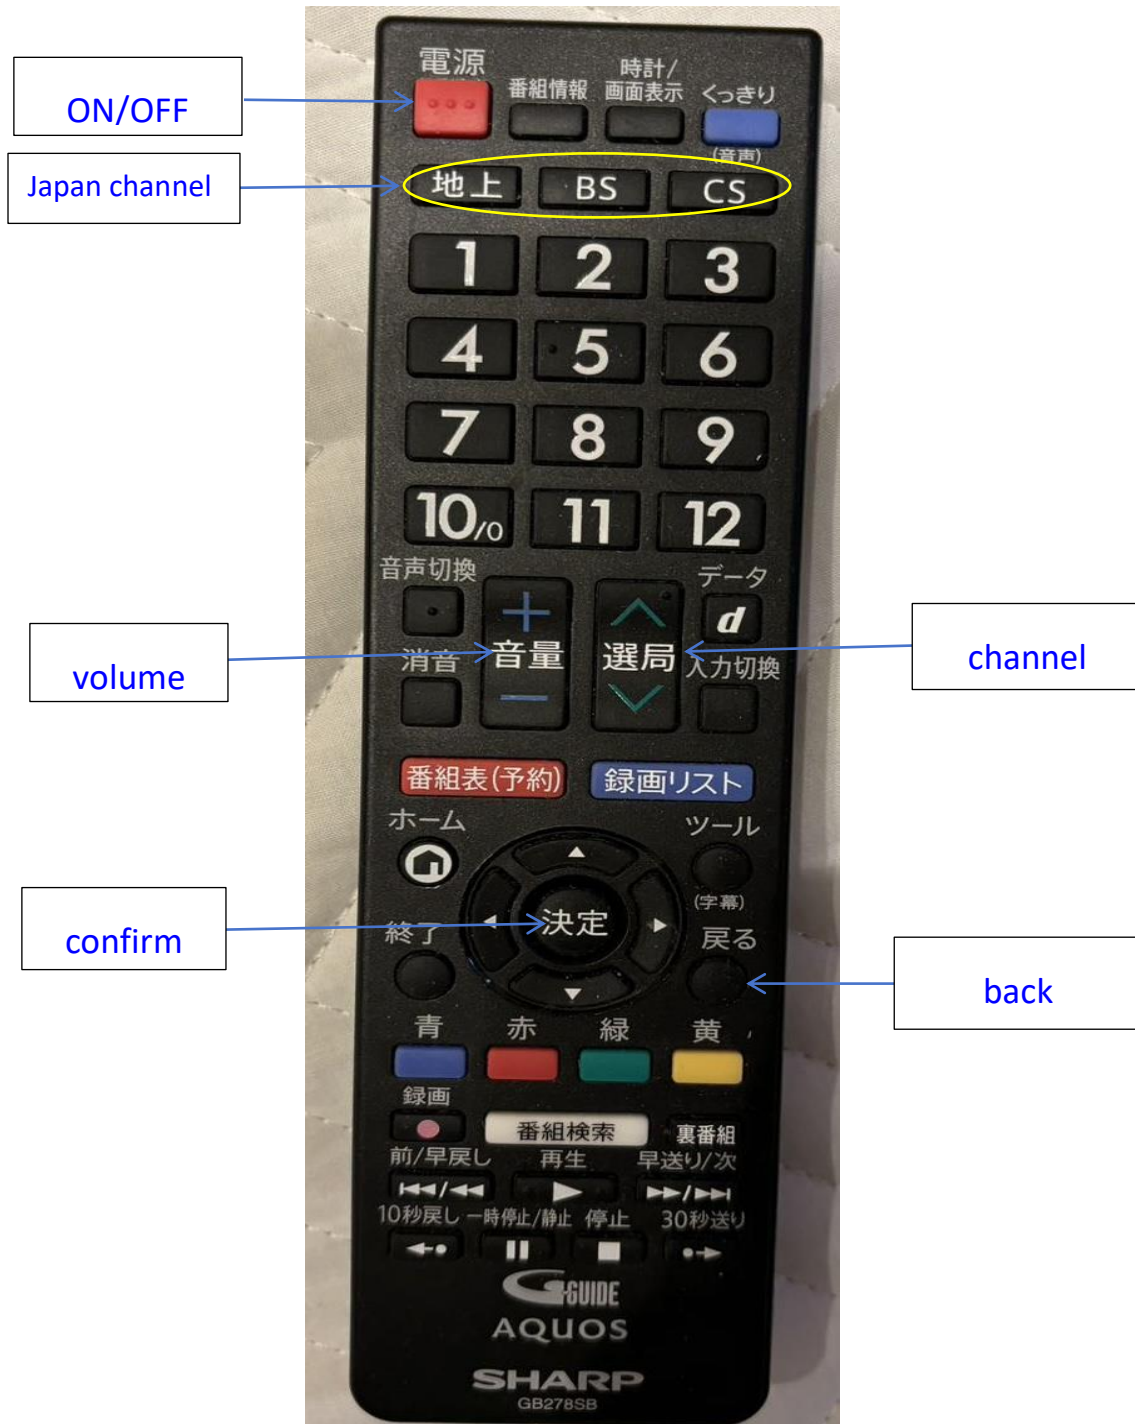

Suggest using with Apple TV box

Air Purifier

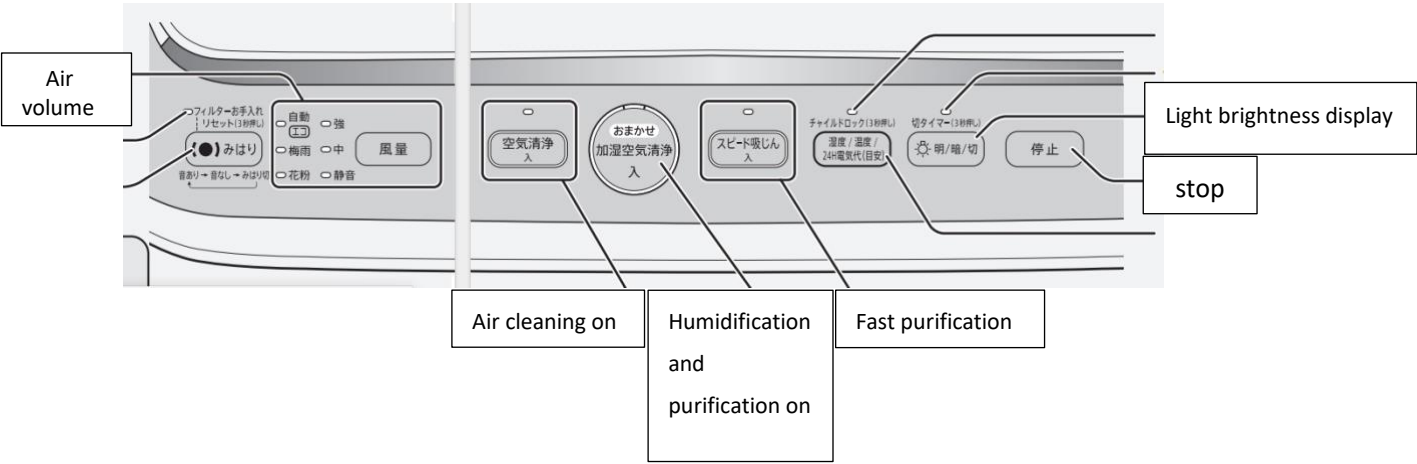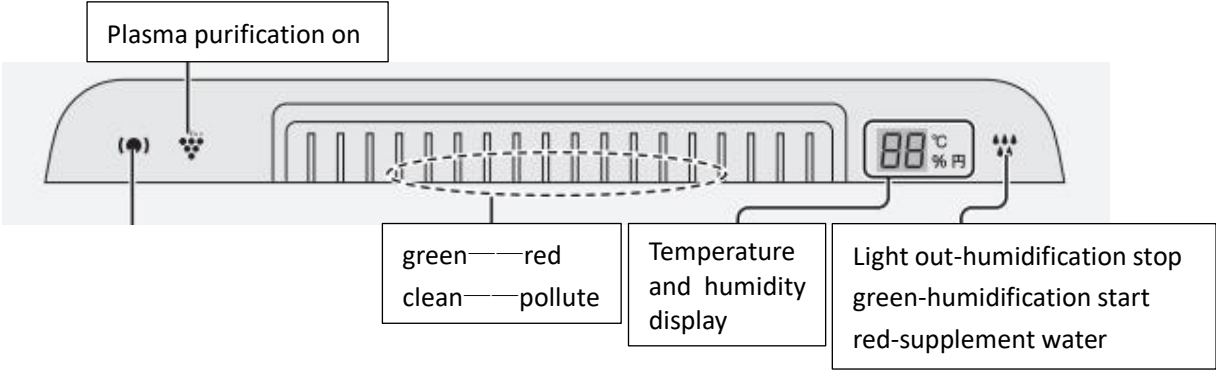

Rice cooker

Attention: put a cup of water (180cc) into the outer pot, put rice and an appropriate amount of water into the inner pot



Put the outer and inner pot into the rice cooker one by one



Press the cook button



Cook button